



Software Crash

If the tablet crashes during a trip, the system will automatically reboot the device.

Once the app has successfully restarted, a prompt will appear asking if you want to adjust the fare for the time and distance that were not recorded.

Always select '**Yes**'. The system will then account for the downtime and adjust the fare accordingly.

